




## ELECTRIC JUG KETTLE

Model: MK-HJ1705G(Green)  
MK-HJ1705P(Pink)

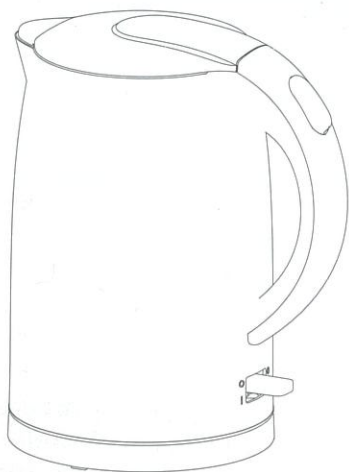

### CONTENTS

IMPORTANT SAFETY INSTRUCTION	-----	1
BRIEF INTRODUCTION	-----	3
PRODUCT PARTS NAME	-----	4
PRODUCT SPECIFICATION	---	4
HOW TO USE	-----	5
CLEANING	-----	6

## Important Safety Instructions

- Read carefully and keep this instructions manual.
- For additional protection, we recommend using power outlet with a rated current of 13A. To avoid circuit overload, do not operate another high wattage appliance on the same circuit.
- Do not fill kettle when positioned on base. Dry the water on the bottom of the body before placing it onto power base.  
Never leave the appliance unattended when in use.
- Close supervision is necessary when your appliance is being used near children or infant persons.
- Electric kettle must be operated on a flat surface. Do not place this appliance on or near a hot gas or electric burner or on the top of other electric appliances.
- Do not touch the hot surfaces, use the handle. Beware of steam being emitted from spout or lid especially during erfilling. Do not remove lid during boiling cycle.
- Do not use kettle to heat anything other than water. Do not fill above the "max". Do not operate kettle if water is below minimum.
- Do not let the power cord hang over the edge of the table or hot over surfaces. Always store excess portion of the power cord in the compartment of the base unit.
- Do not immerse any part of the appliance in water or other liquid. Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person. Always use your appliance from a power outlet of the voltage (A.C.only)marked on the appliance.
- If the power cord is damaged,it must be replaced by manufacturer or authorized persons.

**NOTE:** If the kettle is overfilled, boiling water may overflow.  
The kettle is only to be used with the base provided.

**WARNING:** Do not switch on if there is a possibility that the water in the heater is frozen.

## Important Safety Instructions

- Always unplug from the socket in the following conditions:  
No water in kettle Filling water Not in use Before cleaning or moving kette.
- Call our free customer service number for information or return to Midea Customer Sevice Department for examination and repair. Never repair the appliance yourself.  
**WARNING:** To reduce the risk of fire or electric shock,do not remove the bottom cover of the body or the power base by yourself.
- Do not use a base unit other than the one supplied. The use of accessory attachments not recommended by the manufacturer may result in firek, electrical shock or personal injury.
- Do not insert any object into slots or holes of the kettle.
- This appliance is for household use only. Do not use outdoors.
- This appliance can be used by children aged 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- This appliance is intended to be used in household and similar applications as:
  - Staff kitchen areas in shops,offices and other working environments;
  - Farm houses;
  - By clients in hotels, motels and other residential environments;
  - Breakfast type environments.
- **WARNING:**Do not remove the lid while the water is boiling.
- **CAUTION:**Position the lid so that steam is directed away from the handle.
- **CAUTION:**Ensure that the appliance is switched off before removing it
- from its base.
- **CAUTION:**Becareful and avoid water spillage on connector.  
Incorrect use of appliance may cause serious burns, therefore, attention
- shall be given.
- Do not try to access into kettle's container, heating element surface is subject to residual heat after use.



## Important Safety Instructions

- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.

 Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

■ Contact your local government for information regarding the collection systems available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposal at least for free of charge.

Please follow the above safety precautions


## Brief Introduction

Rational design,  
bring convenience and enjoyment to your life

- Rapid boiling time and energy saving
- Steam control to automatically switch off the kettle after boiling.
- Automatically cuts off for boil-dry protection
- Anti scald double layer porbody
- High quality thermostat
- 360 rotational power base

## Product Parts Name

- |               |                |                       |
|---------------|----------------|-----------------------|
| 1. Lid        | 2. Spout       | 3. Lid release button |
| 4. Handle     | 5. Double wall | 6. Switch/Light       |
| 7. Power base |                |                       |

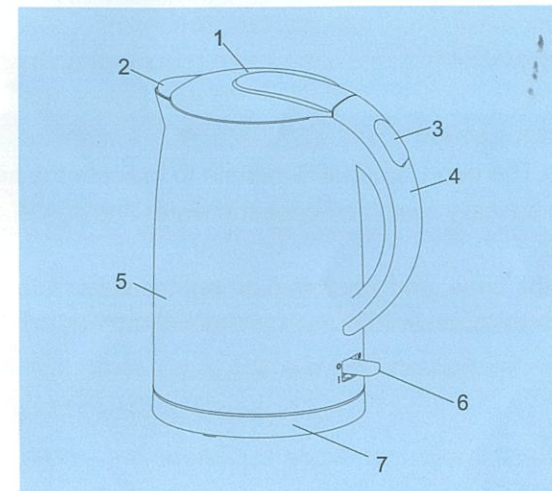

## Product Specification

Model No.	Rated voltage	Rated power	Capacity	Dimensions	Weight
MK-HJ1705P(Pink)	220-240V~ 50/60Hz	1800-2150W	1.7L	21.4 × 15.3 × 25.2cm	1.077Kg
MK-HJ1705G(Green)	220-240V~ 50/60Hz	1800-2150W	1.7L	21.4 × 15.3 × 25.2cm	1.077Kg

## How To Use

For first time use or if you have not used it for a long period; it is recommended that you fill the kettle to the maximum level mark with fresh tap water, boil and empty the kettle at least 2 times to clear the kettle of any tiny particles. Do not drink the water.

- Press the lid release button on the handle and open the lid
- Remove the kettle from the base. Fill the kettle (no less than the minimum and no more than the maximum.) close lid; place the kettle back on the base unit.
- Connect the plug into a power outlet (220-240V, AC), switch the kettle on by pressing the switch. The neon light will illuminate to indicate the kettle is heating.
- The kettle will automatically switch off once the water has boiled and the neon light goes off.
- Lift the kettle from the base, and you can pour out the water into container.

## Cleaning

To prolong the kettle's life, please clean the mineral deposits in the kettle regularly.

Always unplug from the socket and allow to cool down before cleaning.

Do not use chemical, steel wool, or abrasive cleaners to clean the outside of the kettle, as these will scratch the surface and fade the outside color.

- Fill the kettle with 0.5L white vinegar and with water and allow to stand for over 1 hours;
- Empty the solution from the kettle. Wipe off the deposits with damp cloth
- Fill the kettle with clean water, boil and then discard the water. Repeat and the kettle will be ready to use;
- If necessary, repeat the operations above for several times;
- Do not immerse into water. The surface of the kettle may be wiped over with a damp cloth and polished with a soft dry cloth.