 


重点校对项

- 1. 版面尺寸
- 2. 材质标注
- 3. 物料编码
- 4. 颜色标注
- 5. 客户型号
- 6. 产品名称
- 7. 重量标注
- 8. 电压功率
- 9. 说明书装订要求
- 10. 警告/认证标志高度
- 11. 档位、控制面板一致性

项目	
库	
文件名	

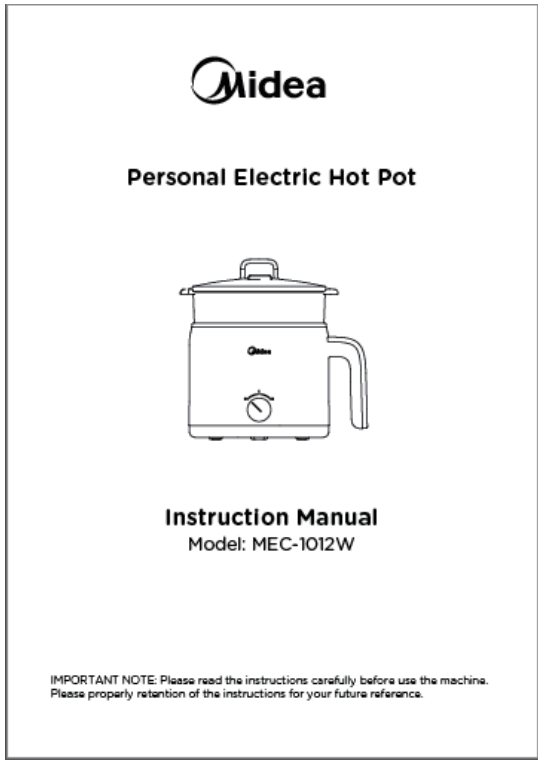

技术要求(版本号:B, 2020-01)

1. 文字图案印刷颜色为: 单色, 印刷字体需清晰可见, 文字不能粘到一起;
2. 该说明书的幅面大小为: 145*210(mm), 未注直线尺寸公差应符合GB/T1804-v;
3. 该说明书的装订方式为: 钉装; [70P以下为钉装, 70P以上为胶装(特殊要求除外)]
4. 说明书警告及认证标志应满足CE/UL标准, CE: 警告部分大写字母高度不低于3mm, CE标志不低于5mm, WEEE标志不低于7mm; UL: 大写字母高不小于1/12”(2.11mm), 小写字母高不小于1/16”(1.6mm), “IMPORTANT SAFEGUARDS”, “SAVE THESE INSTRUCTIONS”等词, 其字高不小于3/16”(4.8mm), IMPORTANT SAFEGUARDS 必须在最前面。
5. 产品应符合QMG-J53.021《产品说明书技术条件》的有关要求。
6. 有ROHS指令要求的物料应符合美的企业标准QML-J11.006《产品中限制使用有害物质的技术标准》。

A: 删除最后一页保修信息 16161000A20000

				电煮锅		MIDEA-DY16Easy102 (ME C-1012W)-0501				
				说明书		材料: 双胶纸 100克				
A	1	黎江运	20220520	广东美的生活电器制造有限公司		共 1 页 第 1 页				
标记	处数	更改文件号	签字					日期		
制图	黎江运	审核	卢灿飞					图样标记	重量	比例
设计	-----	标准化	古广君					K	/	1:1
校对	-----	审定	古广君							
会签	-----	日期	2022-03-09							



Personal Electric Hot Pot



Instruction Manual

Model: MEC-1012W

IMPORTANT NOTE: Please read the instructions carefully before use the machine.
Please properly retention of the instructions for your future reference.

IMPORTANT SAFEGUARDES	3
PARTS AND FEATURES	5
HOW TO USE	5
CLEANING AND MAINTENANCE	7
SELF-INSPECTION FOR ABNORMALITIES	7
WARRANTY	8

Read This Manual

Inside you'll find many helpful hints on how to use and maintain your Personal Electric Hot Pot properly. Just a little preventive care on your part can save you a great deal of time and money over the life of your appliance.

These instructions may not cover every possible condition of use, so attention to safety details is required when operating and maintaining this product.



CAUTION

- This appliance is not intended for use by people (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, unless they have been provided with supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance shall be installed in accordance with national wiring regulations.

Welcome

You are about to see how quick, easy, and delicious healthy eating can be!

Please read all the safety information, warnings, and instructional material found in this booklet before getting start. Set your machine on a dry, level surface.

Then, follow the cleaning instructions to prepare your machine for use. Always clean your machine before the first use.

IMPORTANT SAFEGUARDES

When using your electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric hazard and injury to persons, including the following.

 
1. Read all instructions.
2. Do not touch hot surface. Use handles or buttons of control panel. The unit body will become very hot during long-time using, handle it carefully.
3. CAUTION: To reduce the risk of electric shock, cook only in removable container.
4. Close supervision is necessary when any appliance is used by or near children.
5. To protect against electrical shock, do not immerse cord, plug, or cooker body in water or other liquid.
6. Do not add too much water beyond the maximum fill line on the inside of the water tank, or the water will flow out during cooking.
7. Unplug from outlet when not being used and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
8. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
9. The use of accessory attachment not recommended by the appliance manufacturer may cause injuries.
10. Intended for countertop use only.
11. Do not use the appliance for other than intended use.
12. Do not use outdoors.
13. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
14. Do not let cord hang over edge of table and counter, or touch hot surface.
15. A short power-supply cord is used to reduce the risk resulting from it being grabbed by children, becoming entangled in, or tripping over a longer cord.
16. WARNING: Spilled food can cause serious burns. Keep appliance and cord away from children. Never drape cord over edge of counter, never use outlet below counter, and never use with an extension cord.
17. Prior to first use, please make sure that the electric rating of the appliance is in conformity with the current electric rating.
18. To disconnect, turn the control to "off", then remove plug from wall outlet.
19. DO NOT place unit on or near a hot gas or electric burner, or in a heated oven.

IMPORTANT SAFEGUARDES

20. Only carry the hot pot from the side handle.
21. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way
22. HOUSEHOLD USE ONLY.

SAVE THESE INSTRUCTIONS

PARTS AND FEATURES

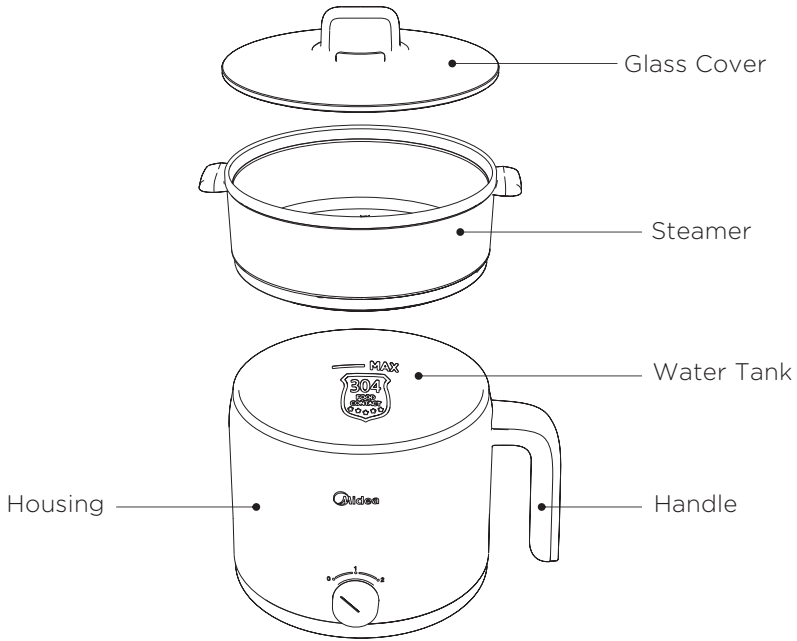


HOW TO USE

When the power switch is turned to position "0", the product is OFF.

When the power switch is turned to position "1", the product starts heating at low power (300W).

 When the power switch is turned to position "2", the product starts heating at high power (600W).

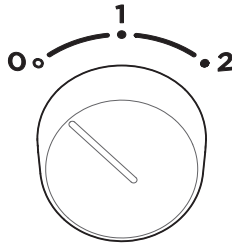

Function Description

- During the boiling of water, after the water starts to boil, turn the knob to position "0" and the product stops heating.
- When cooking starchy food (such as noodles), please open the cover after the water boils, in order to prevent the food from overflowing.
- During cooking of hot pot, after the water boils, put the side dishes into the water tank and eat them after they are cooked thoroughly. Then turn the knob to position "1" to cook at lower power or turn the knob to position "0" to stop heating.
- During the steaming, add a proper amount of water to the water tank, then place the steamer with food on the top of the water tank. You may turn the knob to position "1" or "2" for heating. After the food is steamed thoroughly, turn the knob to position "0" to stop heating.

NOTE: 1 When cooking starchy food, turn the knob to position "1" after the water boils.

- 2 When cooking the food not easy to be well-steamed, such as potatoes and dumplings, it is recommended to add enough clear water to prevent dry-out and raw food.

Turn to position "1" and the product will start heating at low power.

Turn to position "2" and the product will start heating at full power.

CLEANING AND MAINTENANCE

- Please be sure to unplug the power cord plug after each use, and start washing the water tank after it cools down.
- Gently wipe clean the inside of the water tank and the surface of the glass cover by using the soft cloth soaked in neutral detergent.
- Wipe clean the outside surface of the water tank with wrung wet cloth to remove the attached sundries.
- Do not put the whole multi-functional electric heating pot into water for cleaning; Do not wash the water tank and base with water in case of electric shock and malfunction.
- In case the pot is not used for a long time, please clean the water tank and store it properly after drying.

Product Information

Model	Rated Voltage / Rated Frequency:	Rated Power	Rated power
MEC-1012W	220-240V~ 50/60Hz	600W	1.2L

SELF-INSPECTION FOR ABNORMALITIES

Abnormal phenomena	Cause	Check Points and Troubleshooting
Indicator light is not on, and heating function does not work	The power supply is not connected	Check whether the switches, plugs, sockets, power leads are intact or not, and reliable in contact.
Indicator light is not on, and heating function starts working	Indicator light assembly is damaged	Send to the designated maintenance department for maintenance
Indicator light is on, and heating function does not work	<ul style="list-style-type: none">• Heating assembly is damaged• Internal connection wire is disconnected	Send to the designated maintenance department for maintenance
The food overflows	Too much food or water is added	Turn off and reduce the amount of food and water added.

LIMITED ONE YEAR WARRANTY

This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning the product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the label (e.g., 120V-).

We exclude all claims for special, incidental, and consequential damages by breach of express or implied warranty. All liability is limited to amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.

This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental consequential damages, so the foregoing limitations may not apply to you.