 


1 2 3 4 5 6

重点  
校对项

- 1. 版面尺寸
- 2. 材质标注
- 3. 物料编码
- 4. 颜色标注
- 5. 客户型号
- 6. 产品名称
- 7. 重量标注
- 8. 电压功率
- 9. 说明书装订要求
- 10. 警语/认证标志高度
- 11. 档位、控制面板一致性

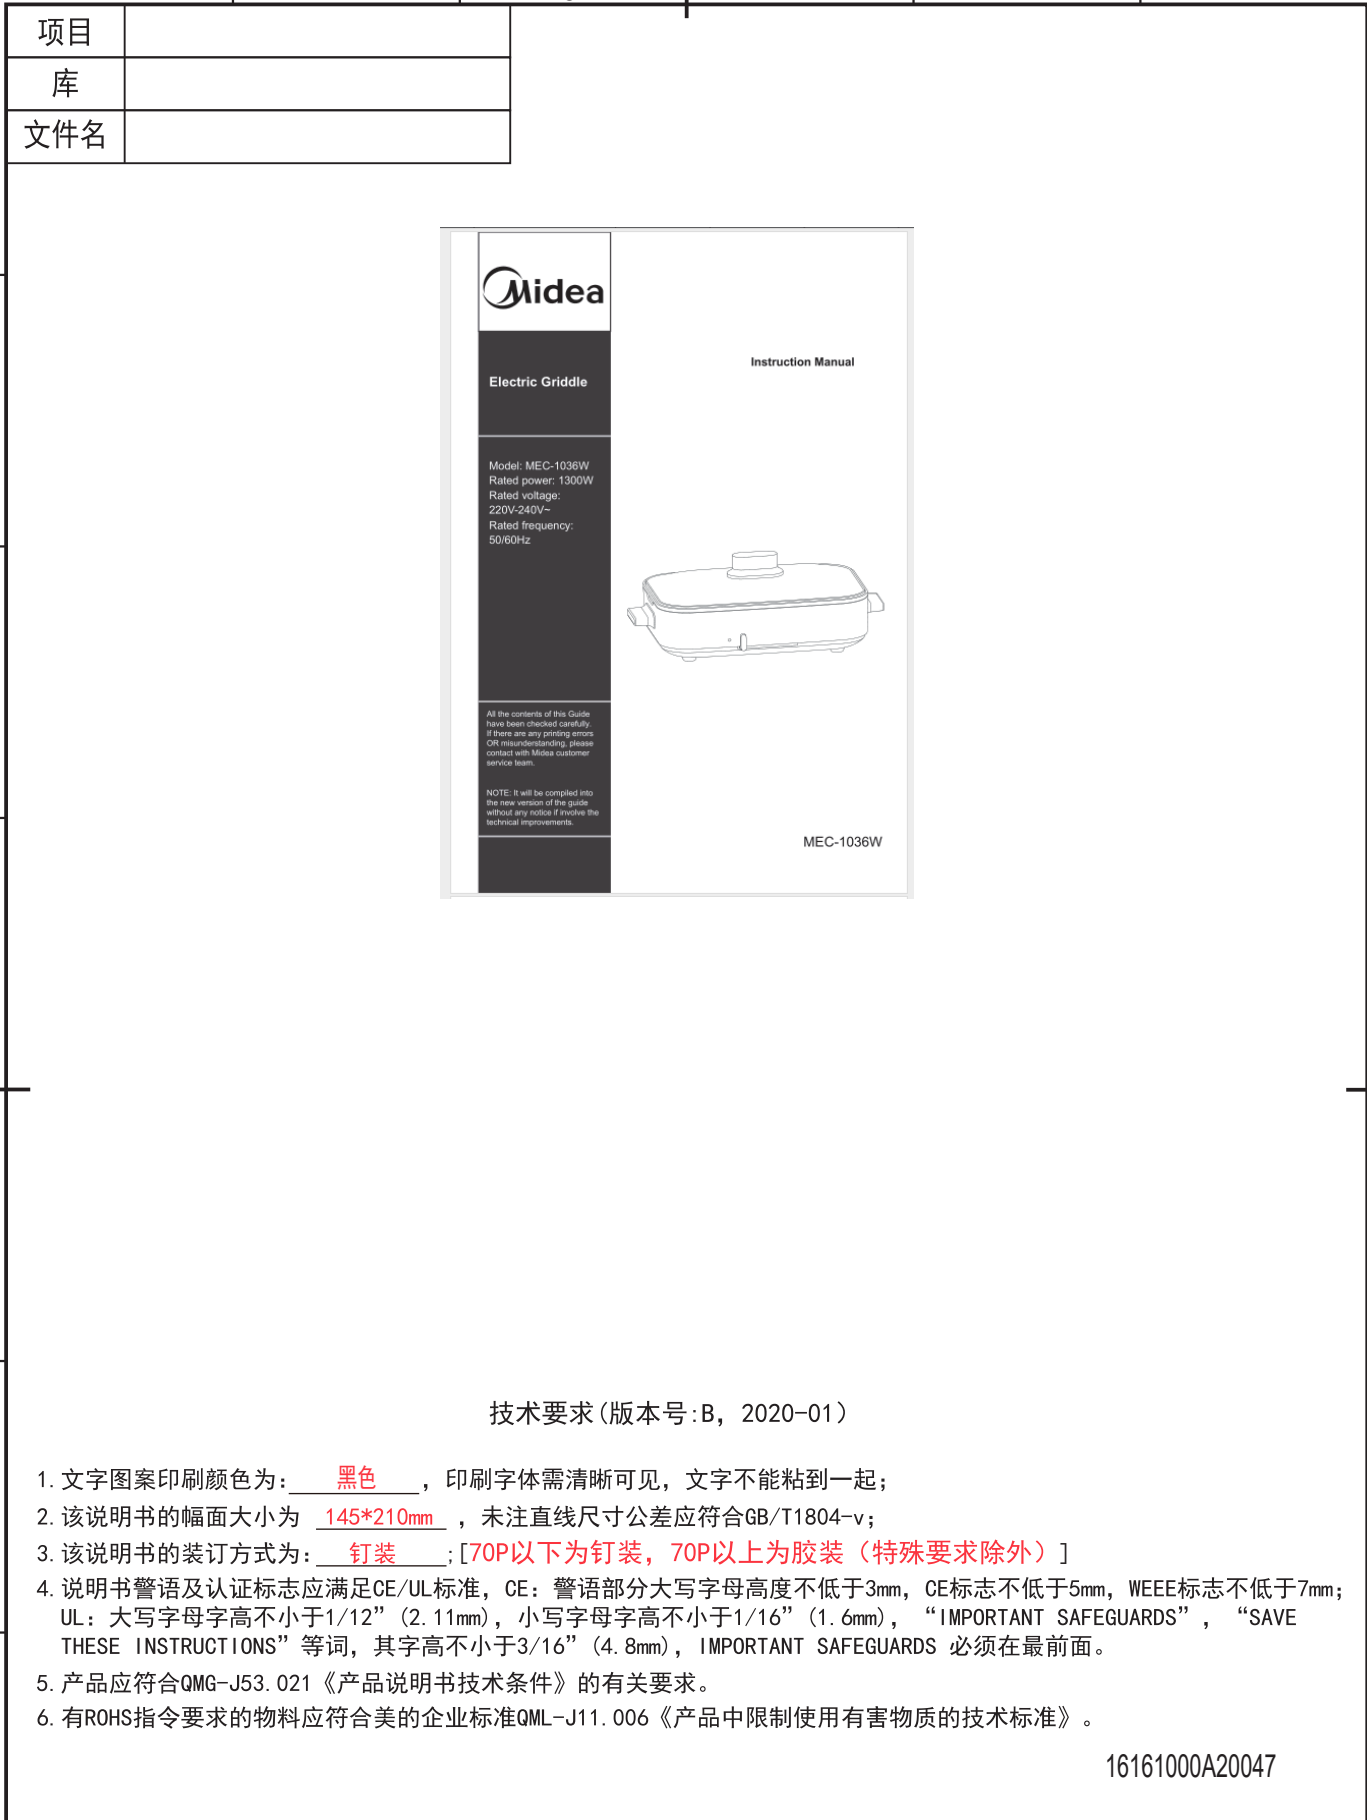

技术要求(版本号:B, 2020-01)

1. 文字图案印刷颜色为：黑色，印刷字体需清晰可见，文字不能粘到一起；
2. 该说明书的幅面大小为 145\*210mm，未注直线尺寸公差应符合GB/T1804-v；
3. 该说明书的装订方式为：钉装；[70P以下为钉装，70P以上为胶装（特殊要求除外）]
4. 说明书警语及认证标志应满足CE/UL标准，CE：警语部分大写字母高度不低于3mm，CE标志不低于5mm，WEEE标志不低于7mm；UL：大写字母字高不小于1/12”（2.11mm），小写字母字高不小于1/16”（1.6mm），“IMPORTANT SAFEGUARDS”，“SAVE THESE INSTRUCTIONS”等词，其字高不小于3/16”（4.8mm），IMPORTANT SAFEGUARDS 必须在最前面。
5. 产品应符合QMG-J53.021《产品说明书技术条件》的有关要求。
6. 有ROHS指令要求的物料应符合美的的企业标准QML-J11.006《产品中限制使用有害物质的技术标准》。

16161000A20047


					<b>多功能锅</b>				MIDEA-MC-DY3020Power101(MEC-1036W)-0501	
					<b>说明书</b>				材料:70g双胶纸	
标记	处数	更改文件号	签字	日期	图样标记		重量	比例	广东美的生活电器制造有限公司	
制图	贾晓慧	审核	卢灿飞	K						
设计	-----	标准化		共 1 页		第 1 页				
校对	-----	审定								
会签	-----	日期	20220318							

1 2 3 4 5 6



## Electric Griddle

 Model: MEC-1036W  
Rated power: 1300W  
Rated voltage:  
220V-240V~  
Rated frequency:  
50/60Hz

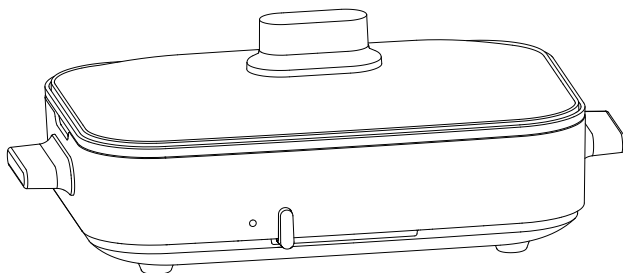

All the contents of this Guide have been checked carefully. If there are any printing errors OR misunderstanding, please contact with Midea customer service team.

NOTE: It will be compiled into the new version of the guide without any notice if involve the technical improvements.

## Instruction Manual

MEC-1036W

# SAFETY INSTRUCTIONS



caution, hot surface

Appliances are not intended to be operated by means of an external timer or separate remote-control system.

Please follow the correct instruction to use the product, to avoid to cause serious personal injury.

Don't touch the heated element surface after used.

Please read the safety instructions before use the appliance, for avoid to cause the risk of fire, electric hazard and personal injury.

1. This appliance is not intended for use by children over eight years of age or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge. Unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety, Children should not use this appliance.
  2. This appliance is not designed for use by persons with reduced physical, sensory or mental capabilities (including children), or lack relevant knowledge or experience, unless they have been given supervision or instruction concerning safe use of the appliance and understand the risks involved. The cleaning and maintenance of this appliance must not be performed by children children without supervision.
  3. Keep distance with the children included the appliance and power cord; Ensure the children do not play with the appliance.
  4. Do not touch the hot surface! The main body will become hot during long time use. Please hold the handles at main body if need to move the appliance.
  5. CAUTION: To reduce the risk or electric shock, cook only in removable container only.
  6. WARNING: Please pay attention to the ingredients overflow the pot due to boiling, to avoid serious scald.
  7. WARNING: Spilled food can cause serious burns.
  8. Close supervision is necessary when the appliance is operating by or near children.
  9. To protect against electrical shock, do not immerse cord, plug, or cooker body in water or other liquid.
  10. Do not add water close to the edge of inner pot, or the water will flow out during cooking.
  11. Unplug the appliance when do not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
  12. Do not use the appliance once the power cord/ appliance damaged, please contact with Midea customer service center for repair.
  13. To avoid danger happen, please use the authorized accessory or parts.
-

## SAFETY INSTRUCTION

14. This product is for household use only, intended for countertop use only.
15. The appliance is only for cooking purpose.
16. This product is for household use only, do not use outdoors.
17. Please be careful to move the appliance if the inner pot with hot liquids.
18. Do not let cord hang over edge of table and counter, or touch hot surface.
19. A short power-supply cord is used to reduce the risk resulting from it being grabbed by children, becoming entangled in, or tripping over a longer cord.
20. In the first time to use this appliance, ensure that the power rating in conformity with the current power rate.
21. DO NOT place unit on or near a hot gas or electric burner, or in a heated oven.
22. DO NOT put frozen articles inside the inner pot when it is too much heat, or wash the inner pot with the cold water.
23. DO NOT uncover the lid when in stewing, otherwise the temperature come down and more stewing time will be needed.
24. DO NOT cooking food directly in the Aluminum pot.
25. DO NOT place the inner pot on gas stove.
26. To avoid any cracks or spoilage that may bring to the slow cooker, proper maintenance is necessary..
27. Only carry the slow cooker from the side handles on the cooking base. Do NOT carry from the handle on the lid ,even when locked.
28. CAUTION: to prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.cedera.
29. Caution, hot surface, The surfaces are liable to get hot during use.
30. Use a cloth to clean the baking tray and utensils after cooking terpisah.
31. WARNING: The appliance must never be used with oil, it should not be used as a frying pan or deep fat fryer!
32. Warning:Avoid spillage on the connector;

**WARNING:** The appliance must never be used as a frying pan or deep fat fryer!

 
 
33. That appliances are not intended to be operated by means of an external timer or separate remote-control system.

34. The heating element surface is subject to residual heat after use.


**WARNING:** Misuse may cause potential injury.

---

## PARTS AND FEATURES

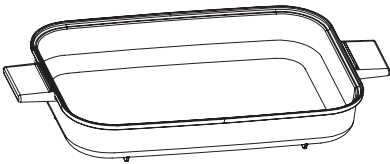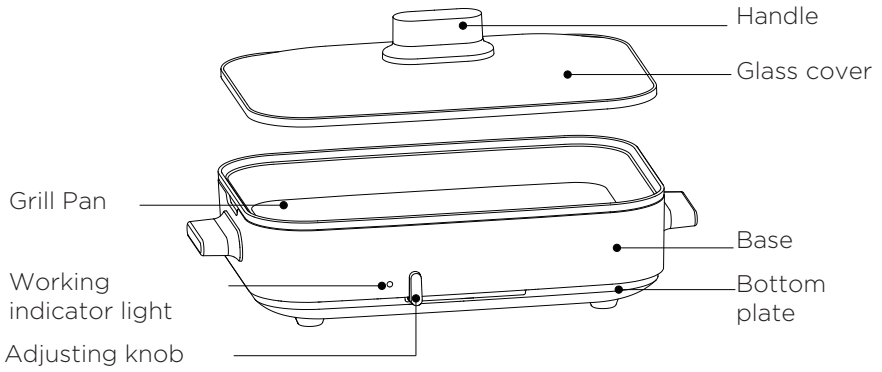

Stew Pot

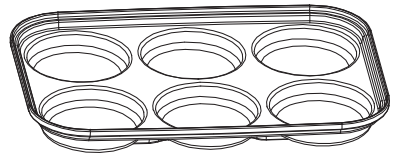 


Pancake Plate

## Product Information

 
Product model	Rated voltage	Rated power	Product size (LxWxH)	Net weight
MEC-1036W	220-240V-50/60Hz	1300W	380x230x146mm	2.46kg

## HOW TO USE


1 Insert the power plug to make sure it is plugged in.

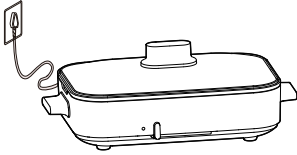

 
2 Turn the adjusting knob in the front to the high temperature gear.




3 Put the seasoning in the baking pan.

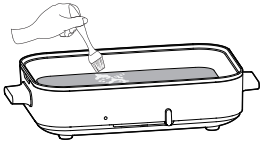 


4 Add food.

 

 5 Put on the glass cover, start cooking, open the glass cover and stir the food at the right time to ensure uniform heating.



 6 After cooking, unplug the power cord and wipe the baking tray with a wet towel after cooling down.

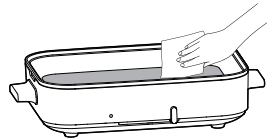

## CLEANING AND MAINTENANCE

- Please be sure to unplug the power cord plug after each use, wait for a few minutes after power failure, and then wipe it with a damp cloth. If it is stored for a long time, it should be cleaned with detergent.
- Do not use abrasive cleaning products or solvents for cleaning.
- Do not put the product in water for cleaning in case of electric shock and malfunction.
- Dry all components before storage and put the product in a safe and dry place.

# FAULT EXPLANATION

Serial Number	Abnormal Phenomena		Cause	Check Points and Troubleshooting
1	Working light is always off	The heating plate stops functioning	<ol style="list-style-type: none"> <li>1. The power supply is not connected</li> <li>2. Internal wire is disconnected</li> <li>3. Fuse is burnt out</li> <li>4. The temperature controller is damaged</li> </ol>	<ol style="list-style-type: none"> <li>1. Check whether the switches, plugs, sockets, power leads are intact or not, and ensure that the plugs and sockets are in right place.</li> <li>2, 3, 4 send to the designated maintenance department for maintenance</li> </ol>
		The heating plate starts functioning	Indicator light is damaged	Send to the designated maintenance department for maintenance
2	The working light is always on and never off	The heating plate stops functioning	<ol style="list-style-type: none"> <li>1. The electric heating pipe is damaged</li> <li>2. Internal wire is disconnected</li> </ol>	Send to the designated maintenance department for maintenance
		The heating plate starts functioning	The temperature controller is damaged	Send to the designated maintenance department for maintenance

**Midea**

*make yourself at home*



**Midea**

*make yourself at home*