

Robot Vacuum Cleaner



SmartHome



Download the app
& activate product

USER MANUAL

VCR S10 Plus

Warning notices: Before using this product, please read this manual carefully and keep it for future reference. The design and specifications are subject to change without prior notice for product improvement. Consult with your dealer or manufacturer for details. The diagram above is just for reference. Please take the appearance of the actual product as the standard.

THANK YOU LETTER

Thank you for choosing Midea! Before using your new Midea product, please read this manual thoroughly to ensure that you know how to operate the features and functions that your new appliance offers in a safe way.

CONTENTS

SAFETY INSTRUCTIONS	01
TECHNICAL DATA	06
IN THE BOX	07
Components in Package	07
Introduction to Parts of Robot Vacuum	08
PREPARATIONS BEFORE USE	09
Installation of side brushes	09
Filter installation	09
Setting up self-emptying base	09
Charging	10
Setting Up App and Connecting the Device	11
Using SmartHome App	11
GETTING STARTED	12
Start / Pause / Resume	12
SPOT Cleaning	12
Recharge	12
Self-Emptying Function	13
Status Indicators of Self-Emptying Base	13

CONTENTS

MAINTENANCE	14
Dustbin/Water tank maintenance	14
Cleaning the mop assembly	14
Cleaning tools	15
Roller brush maintenance (weekly cleaning recommended)	15
Main wheels cleaning (weekly cleaning recommended)	16
Side brushes cleaning (weekly cleaning recommended)	16
How to empty the dust cup	17
How to clean the cyclone	17
How to clean the filter	18
How to clean the dust collection air duct	18
Sensors and charging contacts cleaning	18
TROUBLESHOOTING	19
TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT	20
DISPOSAL AND RECYCLING	20
DATA PROTECTION NOTICE	21

SAFETY INSTRUCTIONS

Warning for the machine

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
Children shall not play with the appliance.
Cleaning and user maintenance shall not be made by children without supervision.
2. Plug must be removed from the socket-outlet before cleaning or maintaining the Appliance. Switch off before cleaning or maintaining the Appliance.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. **WARNING:** For the purposes of recharging the battery, only use the detachable supply unit provided with this Appliance.
Use only with BS2302 supply unit.
5. This Appliance contains batteries that are only replaceable by skilled persons.
6. Do not bring the smart robot close to heat source, radiation or burning cigarette butts. It is strictly forbidden to vacuum the following objects:
 - 1) All liquids such as water and solvents;
 - 2) Lime, cement dust and other construction dust and garbage;
 - 3) Heat generating objects, such as unextinguished carbon butts, cigarette butts;
 - 4) Sharp fragments, such as glass, etc.;
 - 5) Flammable and explosive items, such as gasoline and alcohol products.
7. Before using, please remove all fragile items from the ground (such as glasses, lamps, etc.), and items that may be tangled with the side brush, roller brush and drive wheels(such as wires, curtains and other easily-entangled materials).
8. Please pay attention to your hair and avoid entanglement on wheels or roller brushes when using, cleaning and maintaining the robot.
9. Do not use this product at an altitude of more than 2000m.

SAFETY INSTRUCTIONS

10. Correct Disposal of this product.

This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.



11. Warranty Information

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year (Germany: 2 years), starting from the date on which the Appliance is sold to the end user. The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service centre. When making a claim under warranty, the original bill of purchase (with purchase date) must be submitted. The warranty will not Apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the Appliance, use of non-Approved accessories
- Use of force, damage caused by external influences
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled Appliances

12. Wireless network: 2400-2483.5MHz, MAX POWER:20dBm.

BLUETOOTH MAX POWER:10dBm

To satisfy RF exposure requirements, a separation distance of 20 cm or more should be maintained between the antenna of this device and persons during device operation. To ensure compliance, operations at closer than this distance is not recommended.

13. CLASS 1 LASER PRODUCT

INVISIBLE LASER RADIATION

(Note: Laser classified to Class 1 according to IEC 60825-1:2014)

SAFETY INSTRUCTIONS

Warning for docking station







1. "IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS" and "DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS".
2. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
Children shall not play with the appliance.
Cleaning and user maintenance shall not be made by children without supervision.
3. Plug must be removed from the socket-outlet before cleaning or maintaining the Appliance.
Switch off before cleaning or maintaining the Appliance.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. Docking base is only Applicable to the product VCR S10 Plus. (Battery pack type : Li-ion, DC 14.4 V, 5200 mAh)
The Docking base will automatically start charging after Robot Vacuum Cleaner returned to the base.
6. Warning: The battery charger (Docking station) is not intended to charge non-rechargeable batteries.
7. CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this Appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

SAFETY INSTRUCTIONS

Warning for battery

1. The product must be powered off before removing the battery.
2. Please note that do not disassemble the battery by yourself.
3. If you need to replace it, please contact the after-sales service center.
4. Please dispose of used battery according to local laws and regulations
5. Do not dismantle, open or shred the battery.
6. Do not expose batteries to heat or fire. Avoid storage in direct sunlight.
7. Do not short-circuit a battery.
8. Do not store batteries haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by other metal objects.
9. Do not subject batteries to mechanical shock.
10. In the event of a leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
11. Do not use any charger other than that specifically provided for use with the equipment.
12. Do not use any battery which is not designed for use with the equipment.
13. Do not mix different manufacture, capacity, size or type within a device.
14. Keep batteries out of the reach of children.
15. Seek medical advice immediately if the battery has been swallowed.
16. Keep batteries clean and dry.
17. Do not leave a battery on prolonged charge when not in use.
18. After extended periods of storage, it may be necessary to charge and discharge the batteries several times to obtain maximum performance.
19. The batteries give their best performance when they are operated at normal room temperature ($20\text{ }^{\circ}\text{C} \pm 5\text{ }^{\circ}\text{C}$).
20. Retain the original product literature for future reference.
21. The battery may be irreversibly damaged if the battery is in low power for a long time. It is recommended that the battery retain sufficient power before storage.

SAFETY INSTRUCTIONS

	[symbol IEC 60417-5957 (2004-12)]	for indoor use only
	[symbol ISO 7000-0790 (2004-01)]	read operator's manual
	[symbol IEC 60417-5031 (2002-10)]	direct current
	time-lag miniature fuse-link where X is the symbol for the time/current characteristic as given in IEC 60127	
	[symbol IEC 60417-5032 (2002-10)]	alternating current
	[symbol IEC 60417-5172 (2003-02)]	class II equipment

TECHNICAL DATA

1. Product Model: VCR S10 Plus
2. Host Charging Voltage: 16.7V $\overline{=}$
3. Host Rated Voltage: 14.4V $\overline{=}$
4. Host Rated Power: 55W
5. Docking Station Model: BS2302
6. Docking Station Input: 220-240V $\overline{-}$, 50-60Hz, 850W
7. Docking Station Output: 16.7V $\overline{=}$, 1A
8. Battery Model: BP14452C
9. Battery Rated Voltage: 14.4V $\overline{=}$
10. Battery Capacity: 5200mAh 74.88Wh
11. Charging Limit Voltage: 16.8V $\overline{=}$

Midea Robozone Technology Co.,Ltd.
No.39 Caohu Avenue, Xiangcheng Economic
Development Zone, Suzhou, Jiangsu, China


MIDEA HOME APPLIANCES UK LTD
5 New Street Square, London, EC4A 3TW

Note: You can also view the instructions on the App.


IN THE BOX

Components in Package

Robot Vacuum

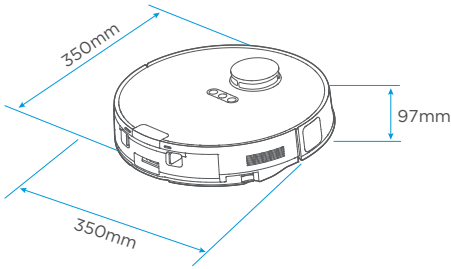


Self-Emptying Base

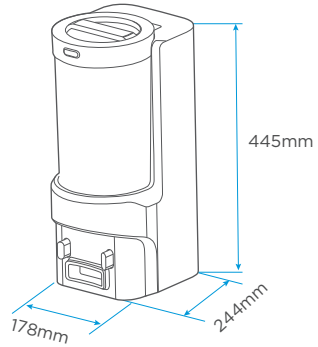


Side Brush x2



 Cleaning Brush







Instruction Manual

 

IN THE BOX

Introduction to Parts of Robot Vacuum

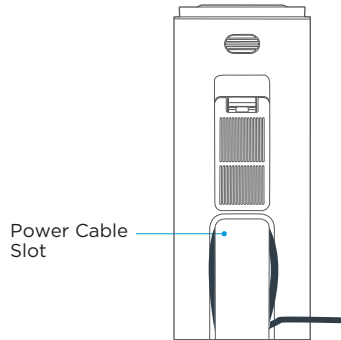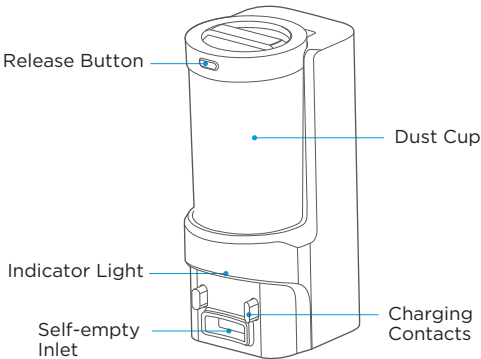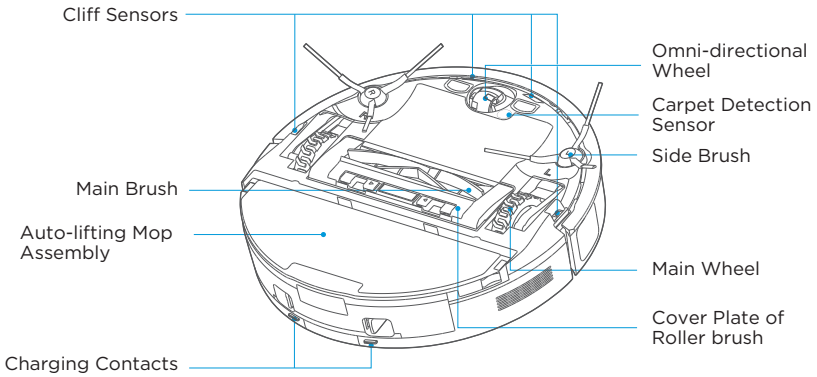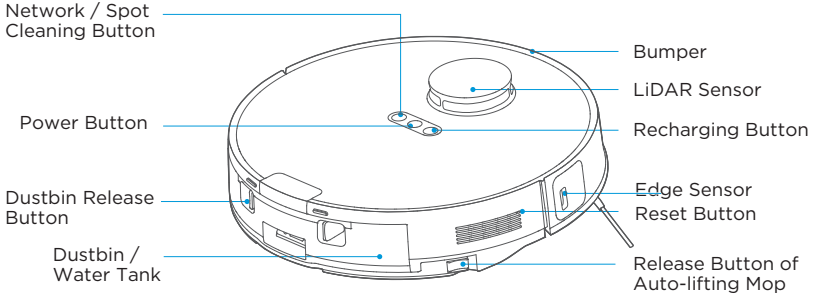


PREPARATIONS BEFORE USE

Notes

Remove excess clutter and cables on the floor before cleaning.

Installation of side brushes


Turn the main unit over. Attach the side brush to its color-matched post and press down until they fit into place.

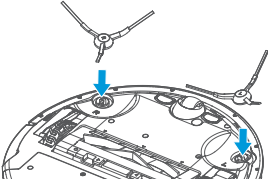

Filter installation


Robot comes with filter installed. Before use, ensure the filter is securely in place. If not, remove dustbin from robot, pull up lid of dustbin and make sure filter is snapped into place. Ensure dustbin lid and bottom latch are securely closed and place back dustbin onto robot.

When using the mopping function, open the tank lid, fill the water tank with purified cold water, and securely close the lid. Please do not add any detergent into the water tank to prevent potential clog.

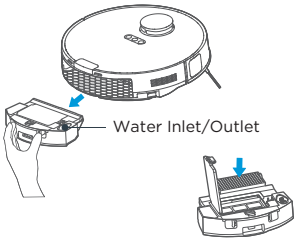

Setting up self-emptying base

1. Place the self-emptying base flat against the wall on a level surface. If there is any charging base for other robot vacuum cleaners in the room, please put it away before use of our self-emptying base to avoid mismatching.
2. Place the self-emptying base in an area covered with wireless network signal to ensure stable network connection of the robot and proper function of the App. Store the excess cables into the slot at the back of the charging base to avoid affecting the proper function of the robot vacuum.
3. Plug the power plug into a power outlet.

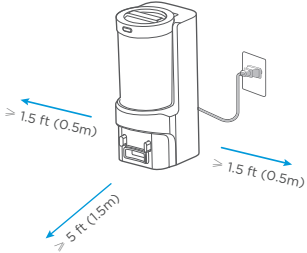

PREPARATIONS BEFORE USE


NOTES

1. Avoid placing the robot and the base under direct sunlight.
2. Be sure to keep the charging area dry.

Charging

Press and hold "⏻" for 3 seconds to power on the robot vacuum. After the power indicator turns on, press the recharging button or manually put the robot back into the self-emptying base for charging, as shown. We recommend you charge the robot for at least 6 hours before using it for the first time.

Indicator Light			Status
🔌	⏻	🏠	
off	stable light	off	1) Robot is in standby mode, or 2) Cleaning in progress, or 3) Robot is fully charged.
off	stable light	stable light	battery level \geq 20%, robot has finished its mission and is going to recharge
off	stable light	flash quickly	battery level $<$ 20%, robot is going to recharge
off	flash slowly	off	Robot is charging
off	flash quickly	off	Error has occurred, see "Troubleshooting".
off	off	off	Robot is in sleep mode or turned off.

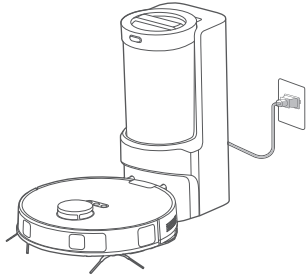

NOTES

1. When the battery level is too low, the robot cannot be turned on. Please manually put the robot onto the charging base.
2. The robot will not be turned off when placed on the charging base. To turn the robot, remove the robot from the base, press and hold "⏻" for 3s to shut it down. All indicators will be turned off.
3. To ensure the optimal performance of the lithium-ion battery, please keep the robot charged.
4. If you manually put the robot vacuum into the base, ensure that the charging contacts of both the robot and the base are connected.
5. For long-term storage, remove the robot from the base, turn it off and store it in a cool, dry place. If the robot is not used for more than 3 months, allow it to get charged for at least 12 hours before using. To preserve the battery lifespan, we suggest you fully charge the battery at least once every six months.

PREPARATIONS BEFORE USE

Setting Up App and Connecting the Device



NOTES

- The app supports iOS versions 13.0 and above and Android versions 8.0 and above. The app is not available for use with tablets.
- This model does not support a WEP encrypted router.
- The home wireless network name and password must contain only letters, numbers and standard symbols.
- The network accessing configuration of the robotic vacuum requires a wireless network of 2.4GHz frequency range.
- The robotic vacuum must be connected to wireless network to enable controlling the robotic vacuum using the app.
- Once you have set up the app and connected the robotic vacuum to wireless network, the app can be used to control the robotic vacuum in the wireless network/2G/3G/4G/5G network environment.
- If your home wireless network password is changed or the router is replaced, the robotic vacuum will show as offline in the app; you will need to reconnect the robotic vacuum to the wireless network following the wireless network connection instructions.

1. In the App Store or Google Play, search for SmartHome, download and install the app.
2. Open the SmartHome app and complete the registration process, which includes an email address confirmation, and once you have confirmed your email address you can log in and follow the setup instructions in the app.
3. Connect your phone to your home wireless network.
4. In the app select Add Devices and choose the device SmartHome app.
5. Connect your robotic vacuum to your wireless network. After assembling and powering on the robotic vacuum, press and hold the "G" button for 3 seconds until a beep is heard. The network indicator light should start flashing white. Follow instructions on app for next steps.




Using SmartHome App

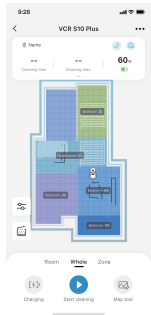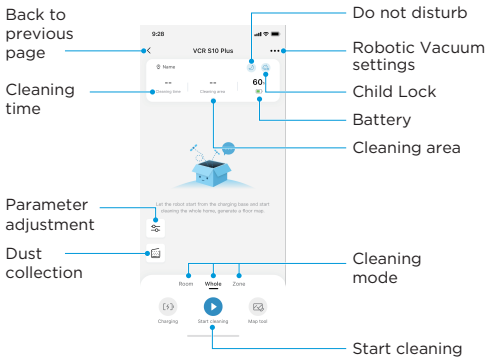NOTE: If the wireless network in your home is unstable, it may cause issues with the operation of the SmartHome App. The content of the SmartHome App may change when the version is updated. Please refer to the Midea Robotic Vacuum interface for details. This interface will be upgraded later, this interface is for reference only.




NOTE: When you start clean, the machine automatically scans and creates a map.


GETTING STARTED

Operation	Button		
			
Short Press	Start/pause/resume	Return to the base	Start spot cleaning
Press and hold for 3s	Shut down	/	Enter the network pairing state


Start / Pause / Resume

Briefly Press "" to start/pause/resume cleaning or use your App to control.




SPOT Cleaning

When the robot vacuum is in standby/pause mode, press "" to start spot cleaning. The robot will begin to clean an area of one square meter centered on itself. After spot cleaning, the robot will automatically return to the charging base to recharge.

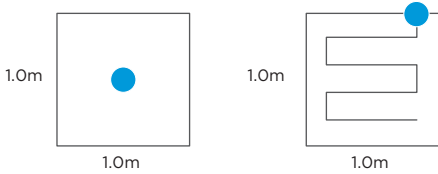Note that starting the spot cleaning mode will automatically stop the current cleaning cycle.



Recharge

1. When the robot vacuum is in standby mode, press "" and the robot vacuum will start recharging.
2. When the robot vacuum is in cleaning process, pressing "" can stop cleaning, and then press "" can start recharging.

Under special circumstances (such as power depletion, robot vacuum jamming, etc.), the robot vacuum may not be able to recharge automatically. Please manually place the robot vacuum back to the charging base.

NOTES

1. The robot vacuum will enter sleep mode when it is in standby mode for more than 10 minutes. In sleep mode, press any key to wake up the robot vacuum.
2. Do not immerse the robot in water. Doing so may damage the equipment, causing short-circuit or current leakage.

GETTING STARTED

Self-Emptying Function

1. After cleaning, the robot will return to the charging base and automatically begin self-emptying.
2. Press the recharging button (the recharge interval between two times should be longer than 5 minutes) to trigger self-emptying.
3. Select manual self-emptying function on the App. Avoid manual self-emptying frequently.

Status Indicators of Self-Emptying Base

Indicator Light	Status
Off	Self-emptying base is powered off. Self-emptying base is in sleep mode.
White light stays on	Self-emptying base is powered on.
White light flashes slowly	Self-emptying is in progress.
White light flashes quickly	The air duct of the dust cup may be clogged. Please check and empty the dust cup in time.

MAINTENANCE


CAUTION

Never operate robot without all filters, filter screen and dustbin in proper position.


WARNING: Moving parts! Recharge robot vacuum cleaner after each use.

Dustbin/Water tank maintenance (clean as needed)


1. Take out the dustbin:
Press the dustbin release button as shown and take out the dustbin.

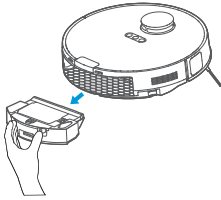

 2. Open the lid of the water tank and clean out the remaining water. Open the lid of the dustbin and take out the filter.




3. Remove debris by tapping the filter against your garbage bin. You can clean the dustbin, the filter and filter mesh with water, but remember to dry them THOROUGHLY before reinserting them into the robot (Do not clean the filter elements with detergents).

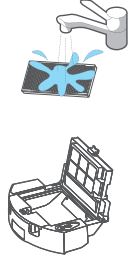


4. Reinsert the dustbin into the robot. It is recommended to clean the filter elements every week and replace them every 1-3 months.

Cleaning the mop assembly


1. Release the mop assembly and clean it.

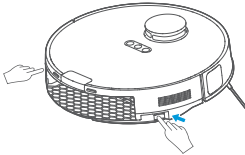


2. Remove the mopping cloth from the mop holder.

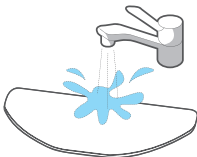

3. Wash the mopping cloth with water and dry it.

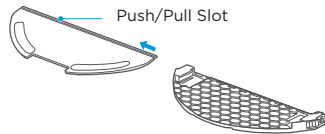

4. Place the cleaned mopping cloth back to the mop holder and re-install the mop assembly to the robot.

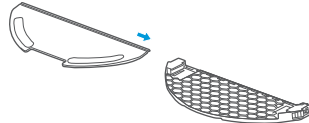

MAINTENANCE

⚠ CAUTION

 
Make sure robot is turned off and not plugged into a power source.

WARNING: Do not attempt to remove belt.

Cleaning tools


How to use the cleaning brush:

- ① Cut the hair entangled on the roller brush with the blade.
- ② Brush off the hair.




Roller brush maintenance (weekly cleaning recommended)


1. Turn the main unit over. Release the cover plate of the roller brush and pull it out, and lift the right side of the roller brush to take it out.

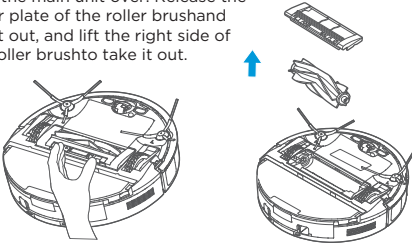

 
2. Clean the roller brush and its cover plate with the cleaning brush or a soft cloth.



3. Wash the roller brush with water and dry it.

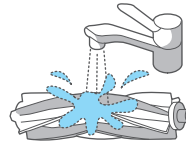


4. After cleaning, press the end cover back to the roller brush body. Install the roller brush body into the main unit according to the direction shown in the figure. It is recommended to clean the roller brush every week and replace them every 6 months.

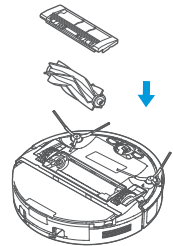

MAINTENANCE



Main wheels cleaning (weekly cleaning recommended)

Rotate the main wheels back and forth to remove debris or dust - remove and take out the hair or debris with the cleaning brush or a soft cloth.

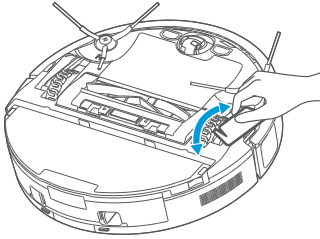

Side brushes cleaning (weekly cleaning recommended)


1. Pull out the side brush.
Remove dust on the side brush.
2. It is recommended to clean the side brush every week and replace them every 6 months.

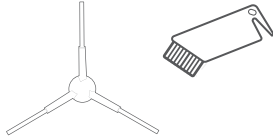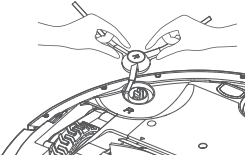

MAINTENANCE

How to empty the dust cup


1. Empty as soon as dirt reaches the MAX mark. Remove the dust cup by moving it vertically upwards.
2. Hold the dust cup over a bin. Press the lower dust cup release tab and empty the trash into the bin.
3. Close the tab, and place the dust cup straight down back into the self-emptying base.

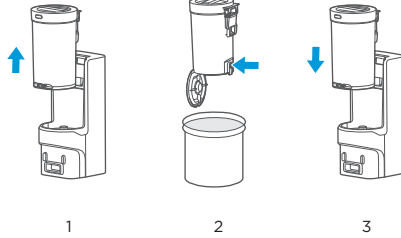

How to clean the cyclone

1. Press the upper release tab to open the top of the dust cup.
2. Take out the sponge filter and the cyclone (use the handle) as shown in figure.
3. Rinse the cyclone with clean water and make sure it is completely dry before putting it back.

4. Place the cyclone and sponge filter back down into their regular positions. Close the dust cup so it clicks into place.
5. Place the dust cup back into the self-emptying base.

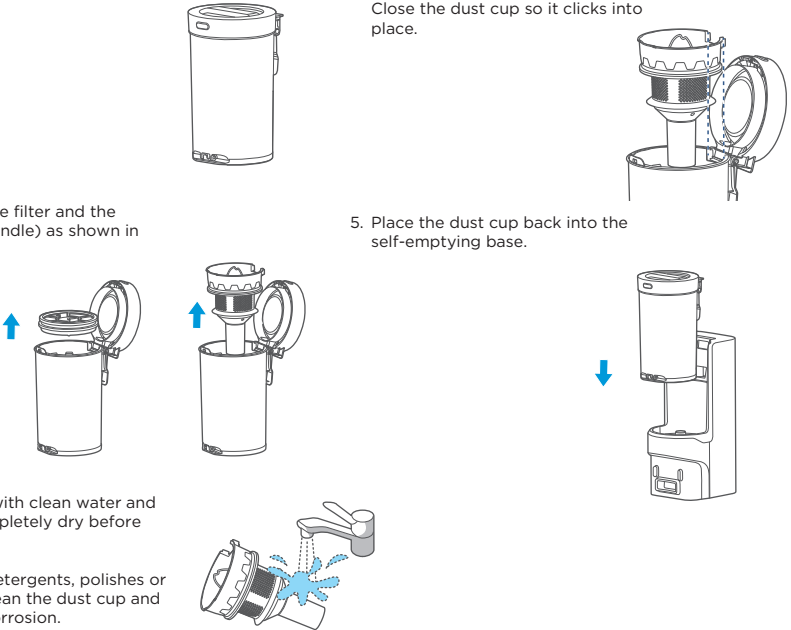


Note: Do not use detergents, polishes or air fresheners to clean the dust cup and cyclone to avoid corrosion.

MAINTENANCE


How to clean the filter

1. Press the release tab of the cover of the filter on the back of the base to remove the cover.
2. Rinse the filter with clean water until it is clean. Make sure the filter is completely dry before putting it back.

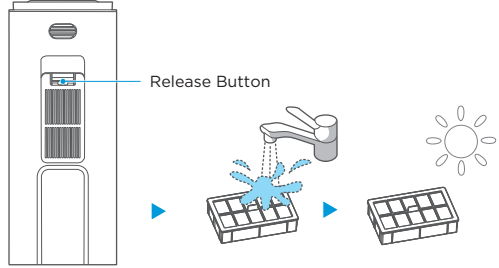


How to clean the dust collection air duct


1. Turn the self-emptying base upside down and check whether the dust collection air duct has been clogged.

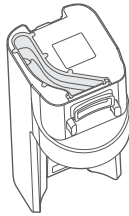


3. Clean and wipe the air duct and air duct cover plate with a dry cloth.

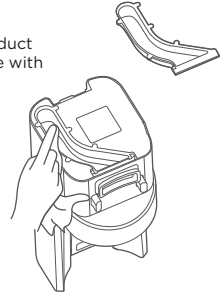

2. If the air duct has been clogged, use a screwdriver to unscrew the air duct cover plate and take off the air duct cover plate.

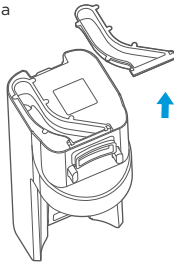


4. After cleaning, reinstall the air duct cover and tighten the air duct cover.

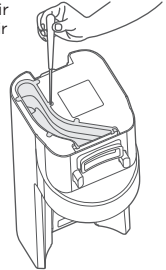

Sensors and charging contacts cleaning

Wipe the sensors on the robot and charging contacts on both the robot and the base with a dry, soft cloth.

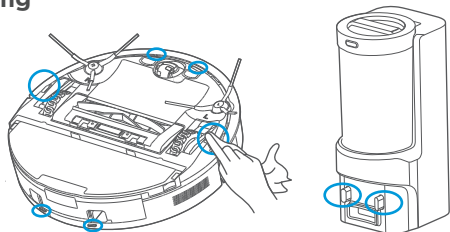


TROUBLESHOOTING

Faults	Possible Causes	Actions
The robot vacuum cannot be recharged	The robot vacuum is not in contact with the charging contacts.	Place the robot vacuum 1m in front of the self-emptying base and press the recharging button.
The robot vacuum cannot return for charging	The self-emptying base is placed improperly.	Place the self-emptying base on a level surface that is free of obstacles.
The robot vacuum is trapped	The robot vacuum is entangled/stuck by objects (such as cords) on the floor.	Please put away the scattered cords and objects on the floor.
	The side brush/roller brush is stuck so that the robot vacuum cannot move normally.	Remove the objects that caused the main/side brush to be stuck and place the robot flat on the floor and restart.
	The robot vacuum is stuck by obstacles.	Remove the obstacles and proceed with cleaning, or set No-go zones in App.
Cleaning process has not been completed, but the robot vacuum returns for charging	The battery level of the robot vacuum is running low.	Let the robot vacuum return for recharging.
Fail to clean as Appointment	Scheduled Appointment has been cancelled.	Reset Appointment.
	The robot vacuum is in Do Not Disturb Mode.	Turn off "Do Not Disturb Mode" or adjust the "Do Not Disturb" time interval.
The robot vacuum does not work	Left/right wheel is suspended.	Place the robot vacuum flat on the floor and retry.
The robot vacuum moves backward	The protective cover of navigation module is stuck.	Gently tap the protective cover to remove dust.
	There is obstacle ahead.	Remove the obstacle ahead.
	The bumper is stuck.	Gently tap the front bumper to remove dust.
	There is dust accumulated on the cliff sensors.	Clean the dust accumulated on the surface of cliff sensors.



Make sure robot is off and charging plug is unplugged.

TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT

 logo, word marks, trade name, trade dress and all versions thereof are valuable assets of Midea Group and/or its affiliates (“Midea”), to which Midea owns trademarks, copyrights and other intellectual property rights, and all goodwill derived from using any part of an Midea trademark. Use of Midea trademark for commercial purposes without the prior written consent of Midea may constitute trademark infringement or unfair competition in violation of relevant laws.

This manual is created by Midea and Midea reserves all copyrights thereof. No entity or individual may use, duplicate, modify, distribute in whole or in part this manual, or bundle or sell with other products without the prior written consent of Midea.

All the described functions and instructions were up to date at the time of printing this manual. However, the actual product may vary due to improved functions and designs.

DISPOSAL AND RECYCLING

Important instructions for environment

Compliance with the WEEE Directive and Disposing of the Waster Product:

This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waster electrical and electronic equipment (WEEE).

This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.



Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

Package information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.



DATA PROTECTION NOTICE

For the provision of the services agreed with the customer, we agree to comply without restriction with all stipulations of applicable data protection law, in line with agreed countries within which services to the customer will be delivered, as well as, where applicable, the EU General Data Protection Regulation (GDPR).

Generally, our data processing is to fulfil our obligation under contract with you and for product safety reasons, to safeguard your rights in connection with warranty and product registration questions. In some cases, but only if appropriate data protection is ensured, personal data might be transferred to recipients located outside of the European Economic Area.

Further information are provided on request. You can contact our Data Protection Officer via MideaDPO@midea.com. To exercise your rights such as right to object your personal data being processed for direct marketing purposes, please contact us via MideaDPO@midea.com. To find further information, please follow the QR Code.

Declaration of Conformity (DoC)

Unique identification of this DoC: NER E10s-002

We Midea Robozone Technology Co.,Ltd.

No.39 Caohu Avenue, Xiangcheng Economic Development Zone, Suzhou, Jiangsu, China

responsibility that the product:

product name: Robot Vacuum Cleaner

trade name: Midea/eureka/Comfee/obode

type or model: NER E10s、VCR S10 Plus

to which this declaration relates is in conformity with the essential requirements and other relevant requirements of the Directive:

Low Voltage Directive 2014/35/EU

Electromagnetic Compatibility Directive 2014/30/EU

Radio Equipment Directive 2014/53/EC

ErP Directive 2009/125/EC STR: COMMISSION REGULATION (EU) 2023/826

ROHS Directive 2011/65/EU

(EC)No 1907/2006

The product is in conformity with the following standards and/or other normative documents:

EN 60335-2-2:2010+A11:2012+ A1:2013

EN 60335-1:2012+A11:2014+A13:2017+A1:2019A14:2019+ A2:2019+A15:2021

EN 62233:2008

EN 61000-3-3: 2013+ A1:2019+A2:2021 EN IEC 55014-1: 2021

EN IEC 55014-2: 2021 EN IEC 61000-3-2: 2019+A1:2021

EN 300 328 V2.2.2 EN 301 489-1 V2.2.3 EN 301 489-17 V3.2.4 EN 62479:2010

EN 62321-4:2017 EN 62321-5:2013 EN 62321-6:2015 EN 62321-7-1:2015 EN 62321-7-2:2017

EN 62321-8:2017

Supplementary information:

Technical file held by: Midea Robozone Technology Co.,Ltd.

Place and date of issue (of this DoC): CHINA 2024-3-29

Signed by or for the manufacturer

(Signature of authorised person)

Name (in print):

Shawn

Title: Certified engineer



Statement of compliance for UK PSTI

We Midea Robozone Technology Co.,Ltd.

hereby declare for below product that we meet mandatory below requirements and standards.

Brand: Midea

Product Name: Robot Vacuum Cleaner

Product Model/type: VCR S10 Plus

Batch/serial no.: See the surface of the product

Support period with end date Period: 3 years End date: 010627

The product meets the following requirements of PSTI Schedule 1 or Schedule2:

Clause	Requirements/Standards in PSTI we met
Passwords	<input type="checkbox"/> 1(1) to (4) of Schedule 1 <input checked="" type="checkbox"/> 1(1) of Schedule 1 and 5.1-1&5.1-2 of ETSI EN 303645 v2.1.1(2020-06)
Information on how to report security issues	<input type="checkbox"/> 2(1) to (3) of Schedule 1 <input checked="" type="checkbox"/> 2(1) of Schedule 1 and 5.2-1 of ETSI EN 303645 v2.1.1(2020-06) <input type="checkbox"/> 2(1) and 2(3) of Schedule 1 and paragraph 6.2.2&6.2.5&6.5 of ISO/IEC 29147:2018(2018-10) &2(4) of Schedule 2
Information on minimum security update periods	<input type="checkbox"/> 3(1) to (6) of Schedule 1 <input checked="" type="checkbox"/> 3(1)&3(3)&3(5)&3(6) of Schedule 1 and 3(3) to (4) of Schedule 2: 5.3-13 of ETSI EN 303645 v2.1.1(2020-06)

To which this Statement of compliance is presented, meeting the relevant requirements of 2023 No. 1007 The Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulations 2023, Schedule 2 Conditions for Deemed Compliance with Security Requirements based on the test reports and technical documents.

Signed for and
on behalf of: Midea Robozone Technology Co.,Ltd.

Address: No.39 Caohu Avenue, Xiangcheng Economic Development Zone, Suzhou,
Jiangsu, China

Name: XIAOFENG YAN

Signature: 

Function: Certified Engineer

Date of issue: 250424

Place of issue: No.39 Caohu Avenue, Xiangcheng Economic Development Zone, Suzhou,
Jiangsu, China



make yourself at home



www.midea.com

© Midea 2022 all rights reserved